





EVO15-S/NT-15 Computer Configuration Guide [English]

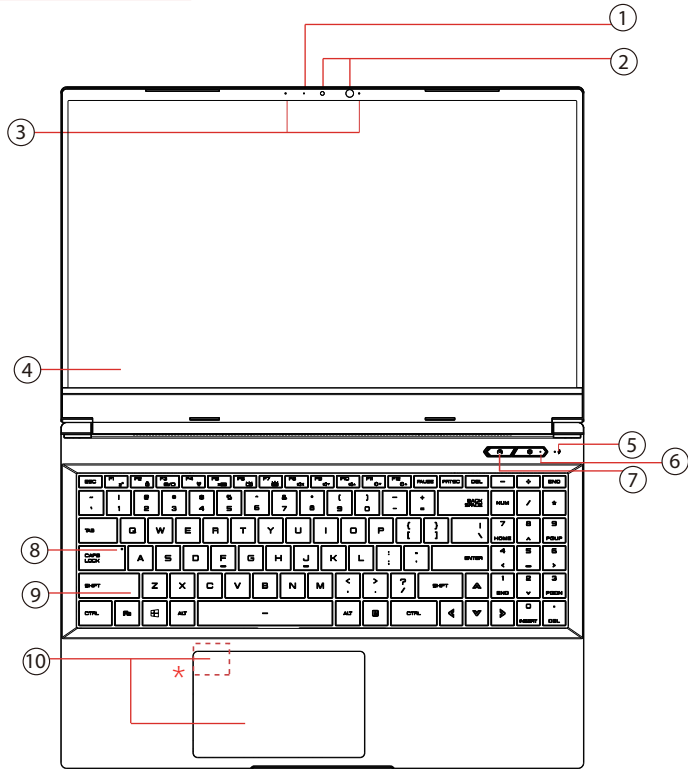


- 1- Camera Status LED
- 2- Camera or Infrared capability for Facial recognition camera
- 3- Microphone
- 4- LCD screen
- 5- Charging & Battery indicator
- 6- Power Button
- 7- Game / Office / Turbo Mode Switch
- 8- Caps Lock Status LED
- 9- Keyboard
- 10- Touchpad/Click pad
Touchpad LED indicator/ Touchpad switch


*Click twice left corner will open or close (light) touchpad functionality

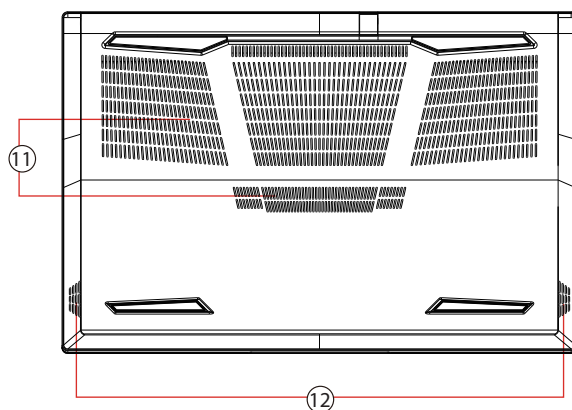

- 11- Vents
- 12- Speaker

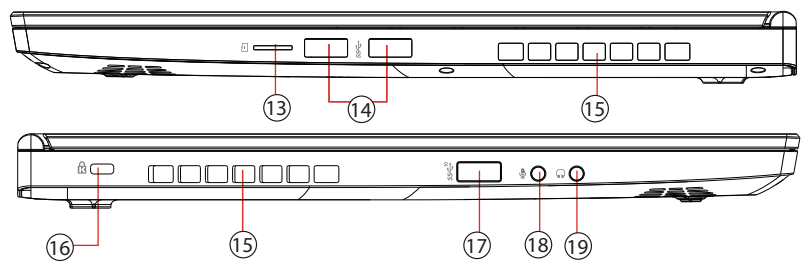

- 13- Card Reader
- 14- USB Port
- 15- Vents
- 16- Kensington® Lock Port
- 17- USB Port
- 18- Mic In Jack
- 19- Audio Out Jack

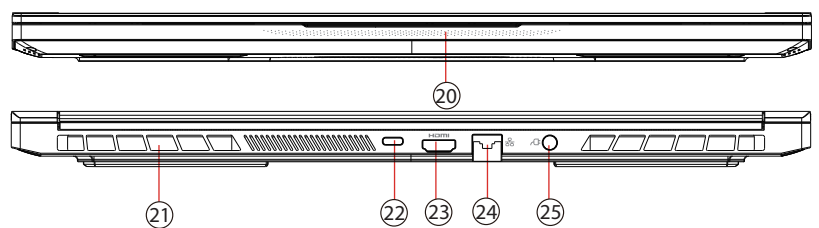

- 20- Light bar
- 21- Vents
- 22- USB TypeC Port
- 23- HDMI port
- 24- Network Jack
- 25- Power Connector

Starting

* Please note: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty.

