 
 




EVO17-S/NT-17 Computer Configuration Guide [English]

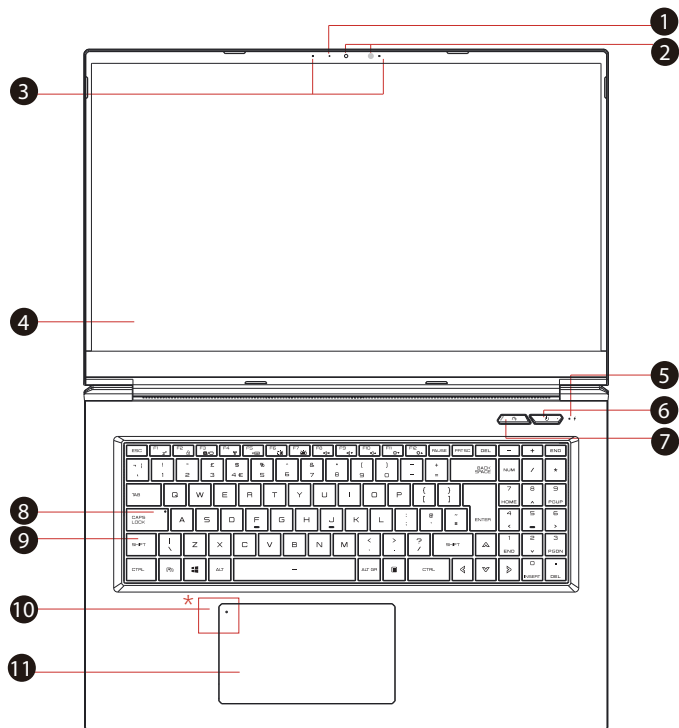 


*Click twice left corner will open or close (Green light) touchpad functionality

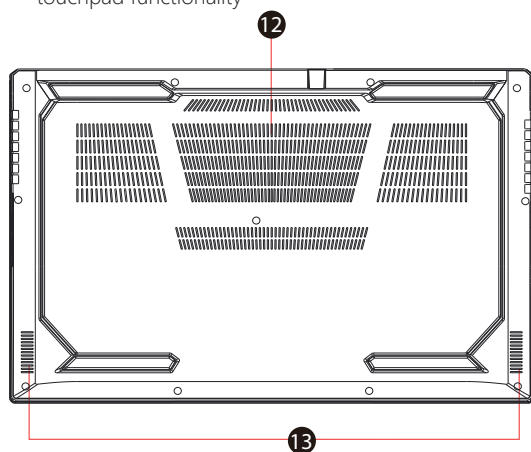 


- 12- Vents
- 13- Speaker

- 1- Camera Status LED
- 2- Camera
Infrared Capability For Facial Reconition Camera
- 3- Microphone
- 4- LCD Screen
- 5- Charging And Battery Indicator
- 6- Power Button
- 7- Turbo / Game / Office Mode Switch
- 8- Caps Lock Status LED
- 9- Keyboard
- 10- Touchpad LED Indicator / Touchpad Switch
- 11- Touchpad / Click pad

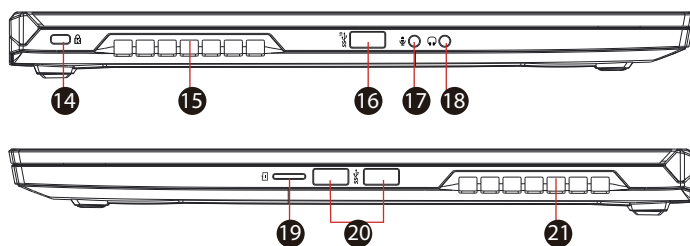

- 14- Kensington® Lock Port
- 15- Vents
- 16- USB Port
- 17- Mic In Jack
- 18- Audio Out Jack
- 19- Card Reader
- 20- USB Port
- 21- Vents

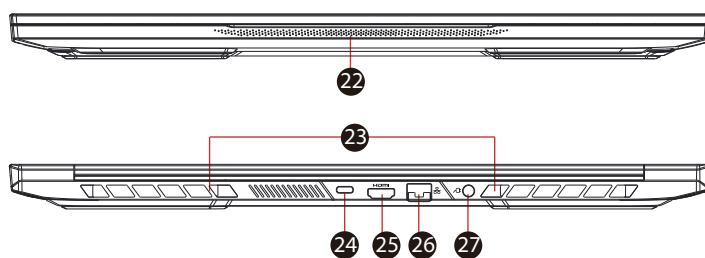

- 22- Light bar
- 23- Vents
- 24- USB Type C Port
- 25- HDMI port
- 26- Network Jack
- 27- Power Connector

Starting

* Please note: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty.

